


INSTRUCTIONS FOR THE JOHNSON MARINE SPREADER HALYARD KIT CAT. # 40-530

1. You will require a 3/8" open-end wrench or small adjustable wrench and screwdriver.
2. Attach bail with block to underside of starboard spreader at the spreaders mid-point. Fasten with screws supplied.
- ③ Assemble cleat to shroud at desired height from deck using the correct number of washers as indicated in the chart for 5/32" thru 3/8" wire or rod. Keep in mind that the line supplied will allow 17 ft. maximum between block and cleat.
- ④ Attach flag clips using "figure 8" knots; position first clip about 6" from end of halyard. Position the second clip at the same distance as the grommets of your flag.
- ⑤ Pass the free end of line through hole in top of cleat, then through the block.
- ⑥ Pull line until clip stops at the hole in cleat, allow 4 or 5 feet of extra line beyond cleat, and cut excess with hot knife.
- ⑦ Tie line ends together using square knot and serve the ends as shown.
8. Attach the 3/4" stainless rings to your flag grommets, bronze snaps attach to these rings.


Assembly of wire clamp for cleat:

- Ⓐ cleat
- Ⓑ U bolt
- Ⓒ Nut (2)
- Ⓓ Washers (10)

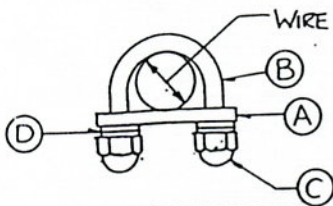

WIRE DIA.	NO. OF WASHERS
5/32"	5 each leg
3/16	4 each leg
7/32	3 " "
1/4	2 " "
9/32	1 " "
5/16, 3/8	none


③

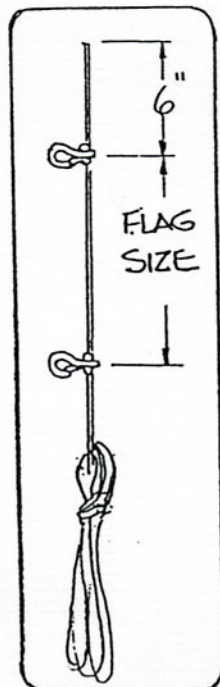


④



⑤

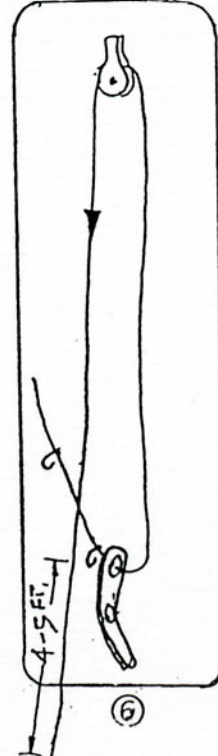

⑥

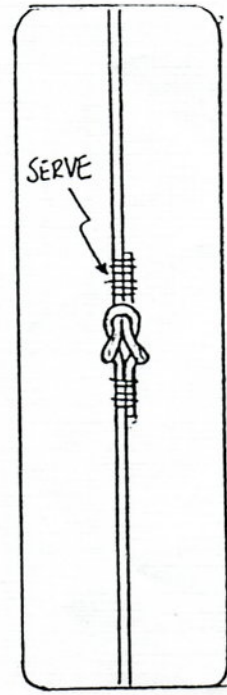

⑦